



typeman®W Series

USER MANUAL

Description:

W Series is supported by wireless 2.4G. The Keyboard Layout is QWERTY. All keycap is bundle with PBT double shot, cherry MX switch and 6-key Roll over.

Included accessories:

- keyboard x1
- Key puller x1
- User manual x1
- Dust cover x1
- AAA Battery x2
- 2.4G Wireless dongle x1

Specifications:

- Key Layout:W200=USASCII(87keys)=US
W210=USASCII(108keys)=US
- Dimensions:W200=L 363 mm x W 140mm x H 42mm
W210=L 443mm x W 140mm x H 42mm
- Key Switch Life Time: 50 millions
- Interface: USB (DC5V-----100mA)

LED Indicator:

NumLock
Indicator(W210)



CapsLock
Indicator



ScrLk
Indicator



Battery
Indicator




Main Function:

Fn Keymap		Function	
Fn	+	*F5	Mute
		*F6	Volume Down
		*F7	Volume Up
		*F8	Calculator
		F9	Play/Pause
		F10	Stop
		F11	Previous Track
		F12	Next Track
		L_Win	WinLock
		R_Win	Win UnLock
		R_Ctrl	Menu
		Del	Reset

*F keymap for W200 used only.

Keyboard set up:

1. Please insert the dongle to your terminal.
2. Put the battery to keyboard and Turn on the power button  located on the bottom of the case.
3. Start to use the keyboard.

Note:

1. The CapsLock/ScrLk indicator will be light off after 2 seconds because power saving.
2. If power energy is enough, the battery indicator will light up but shut down after 3 seconds.
3. If power energy is not enough, the indicator will be flashing.
4. Full keyboard reset(to factory setting): Press Fn+Del for about 3 seconds. (All Led indicators will flash 3 times)