



108 **A7**
SERIES **SERIES**

ikbc Mechanical keyboard **User manual**

使用手冊



Warranty card

Exclusions

This warranty does not cover problems or damage resulting from, but not limited to, any of the following:

Wear and tear associated with normal use.

Any unauthorized modification or repair, accidental damage or disassembly.

Removal of any manufacturer label(s) or sticker(s).

Any improper operation, including any use not in accordance with any supplied product instructions.

Connection to any improper voltage supply.

Any other cause which does not relate to a product defect in materials or manufacturing.

Counterfeit products; (iKBC, at its sole discretion, determines were not manufactured by iKBC or any of its authorized manufacturing partners).

important note: regarding the box named « Warranty confirmation from reseller », it can be removed for keyboards shipped through online channels since nobody is going to sign the boxes.



Functions Description

1. PRESS FN + Left Windows key = Lock 2 Windows keys
2. PRESS FN + Right Windows key = UNLOCK 2 Windows keys
3. PRESS FN + Scrk = Switches to 6 keys (Default layout is N key)
4. Fn+ Delete= RESET mode
5. Specific for CD87, you can PRESS Fn + F1 / F2 / F3 / F4 = Mute / Volume down / Volume up / Calculator

Remark:

1. Default setting is N key, when the LED light will flash 1 time when switching to 6 Key, the LED light will flash 3 times when switching to N Key.
2. PRESS Fn + Delete : PRESS Fn + Delete for 3 seconds, the LED lights will flash 3 times.

產品功能說明

1. 按 FN + 左 Windows key= 鎖住兩個Windows keys。
2. 按 FN + 右 Windows key = 解鎖雙 2 Windows keys。
3. 按 FN + Scrk = 切換到6 keys (原始設定為N key無衝)。
4. 按 Fn+ Delete= 恢復原廠設定。
5. 針對CD87，當你按下 FN + F1 / F2 / F3 / F4 = 靜音 / 小聲 / 大聲 / 計算機。

Remark:

1. 原廠設定的出廠值是 N Key 全無衝，當切換到 6 Key 無衝時LED 指示燈會閃爍一次，再次切換到 N Key 時LED指示燈閃爍三次。
2. PRESS Fn + Delete : 按壓 Fn + Delete三秒後LED 會閃爍三次。

