

## Hot key Description



F1 : Decrease Screen Brightness



F2 : Increase Screen Brightness



F3 : Mission Control



F4 : Launchpad



F5 : Decrease Keyboard Brightness



F6 : Increase keyboard Brightness



F7 : Previous Track



F8 : Play Pause



F9 : Next Track



F10 : Mute



F11 : Decrease Volume



F12 : Increase Volume

## Warranty

This warranty does not cover problems or damage resulting from, but not limited to, any of the following:

- Wear and tear associated with normal use.
- Any unauthorized modification or repair, accidental damage or disassembly.
- Removal of any manufacturer label(s) or sticker(s).
- Any improper operation, including any use not in accordance with any supplied product instructions.
- Connection to any improper voltage supply.
- Any other cause which does not relate to a product defect in materials or manufacturing.
- Counterfeit products; (MISTEL, at its sole discretion, determines were not manufactured by MISTEL or any of its authorized manufacturing partners).

**RMA services contact : [services@mistelkeyboard.com](mailto:services@mistelkeyboard.com)  
[www.mistelkeyboard.com](http://www.mistelkeyboard.com)**

**MISTEL**  
DREAMING ON YOUR FINGERTIPS.

Warranty confirmation from Reseller

**MISTEL**

DREAMING ON YOUR FINGERTIPS.



**SLEEKER**

**MD870/880 User manual**

Mac OS X Compatible

## Description

SLEEKER is a mechanical keyboard compatible with Mac OS X, SLEEKER is equipped with OS X hot keys, you can see the hot keys icon on the keycap, no firmware or software is required. SLEEKER also supports Windows OS, by pressing Fn+ Space Bar Key, you can switch between Mac and Windows OS layouts very easily. SLEEKER has a unique, simple yet elegant design, outlined with smooth curves, the entire case is made of CNC aluminum material with added hair lines on the surface.

## Package Accessories

1. Sleeker Keyboard x 1
2. Key puller x 1
3. User manual x 1
4. Type C cable x 1
5. Type C to Type A adapter x 1
6. keyboard bag x 1
7. Extra 13 keys

## System requirement

OS X 10.4.10V or Later

## Specification

Model name: SLEEKER  
Model number: MD870/880  
Keyboard Layout : ANSI/ISO  
Number of keys: 87/108 Keys  
Keycap: Cherry low profile PBT keycap and Dye-Sublimation printing  
Keyswitch: Cherry Mx switch  
Polling rate: 1000Hz  
Matrix: NKRO  
Media keys: YES  
Case material: Aluminum  
Interface: Type C  
System compatible : Mac OS X/Windows  
Firmware upgrading: Windows  
LED Backlit: White led

## Mac function

1. **Fn + F13** = turn on the LED for Breathing Mode / Turn off
2. **Fn + Home** = Turn the Left side "Control" key into a second Fn key, that means there are 2 Fn keys, one on the right and left side.
3. **Fn + End** = Switch Capslock key with left Control key (When you press Fn+ home then press Fn+ End, the original caplock position is Fn then left side control is capslock.)
4. **Fn + 5 (Number Pad Area)** = Turn on Arrow functions, 2 is down/ 4 is left/ 6 is right / 8 is up. (for MD880 only)
5. **Press Fn + 5 again** = go back to original factory setting.

## Windows function

1. **Fn + Space bar** = Switch to Windows OS (MD870 : LED light up in left pilot lamp, MD880 : LED light up in middle pilot lamp)
2. **Fn + 5** = Turn on LED / Breathing Mode / Turn off LED
3. **Fn + Arrow key** ↑ ↓ = adjust keyboard LED brightness
4. **Fn + Arrow key** ← → = adjust Keyboard LED speed
5. **FN + Right win** = Windows lock, press FN+ right Win key again: Windows unlock
6. **Fn + home** = exchange left alt and windows
7. **Fn + end** = exchange capslock and left control
8. **In MD870, Press Fn+ F1/F2/F3** = (Mute/ Volume down/ Volume up)
9. **In MD880, Press Fn+F16/F17/F18/F19** = (Mute/Volume down/Volume up/Calculation)
10. **Fn + Delete** = Keyboard Reset